

ALE M8 Quick Start Guide



Change Language: English by default. Phone UI path: Menu → Basic Setting → Language

1. Configuring the network


Dynamic mode by default. Phone UI change path:

Menu → Advanced Setting (default password: 123456) → Network → IP Config → IPv4 settings → IPv4 Mode

2. Configuring an account

Users can configure an account via phone UI or Web UI. Web UI example:

- Step 1: Press "OK" key to view the IP address.
- Step 2: Enter https://IP address on the browser. Login with "admin" and password "123456".
- Step 3: Configure the account as shown below.

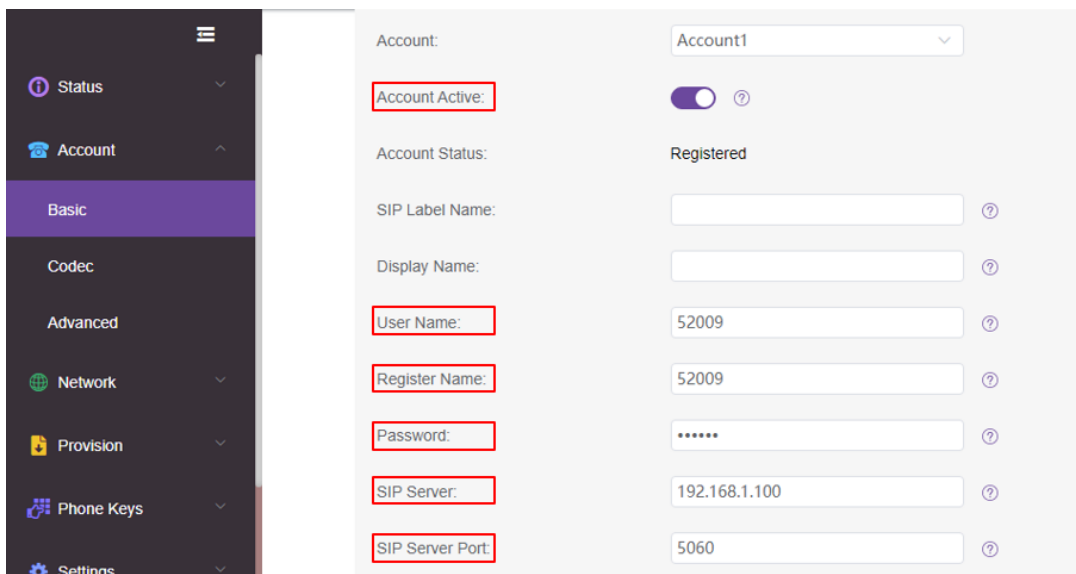

Note: Marked items are mandatory. Please contact the service provider for details.

- Step 4: Account status shows "Registered" when the SIP account is registered successfully.